

6B Controls

The 6B control modules are located directly above the high voltage interface chassis in rack IN01B02.

